

Popcorn Machine

Operational Tips:

SWITCHES

Light and Warmer Switch - Turns on heat lamp and optional strip heater under the corn pan.

Kettle Motor Switch - Turns on the motor that drives kettle agitator shaft.

Kettle Heat Switch – Turns on heat element inside the Kettle.

Note: DO NOT Cover air vent holes. Motor air intake and exhaust holes at top of the machine must be clear of any obstruction.

DO NOT plug into extension cord, plug into a dedicated outlet ONLY.

AVOID SERIOUS BURNS! DO NOT TOUCH THE KETTLE WHILE IT IS HOT!

USE ONLY PEANUT OR COCONUT HIGH TEMP OIL!!!

TOP POP

- Turn on kettle heat switch and kettle motor and exhaust switch.
- Test “Pop” a kettle corn, place oil measurement in kettle with three kernels, when kernels pop, place the remainder of the oil, measured corn and flavoring in the kettle, close the lid.
- When the corn has popped, rotate the handle to empty popcorn from the kettle, and return the kettle to upright position.
- Repeat the cycle, subsequent batches are always more flavorful than the initial batch.
- Turn off the kettle switch on the final batch when the popcorn breaks over the lid of the kettle to eliminate smoke and odor.
- Turn off Kettle heat, kettle motor and exhaust switches.
- Wipe exterior of the kettle with a heavy cloth after the kettle has cooled, to prevent burn or stain of oil dripping.
- Turn of ALL switches.

TO CLEAN

- Remove popped corn and pack in bags
- Remove the “old maid” pan, empty un-popped kernels and wipe clean
- Wipe interior of the machine clean

PREMIERE EVENTS SOUTH (512) 292-3900
PREMIERE EVENTS NORTH (512) 870-8552
PREMIERE EVENTS DRIPPING SPRINGS (512) 829-4498