

# SNO-KONE MACHINE

The Sno-Kone Machine is a very simple machine to operate, but in order to get the best results, please read the following BEFORE, you attempt to operate the machine.

## IMPORTANT INFORMATION

The Sno-Kone Machine consists of the motor, shaving unit, and dispensing case. The motor has a toggle switch mounted on it. There is a separate switch on the light inside the case.

On the end of the motor shafts mounted the cutter head, which is inside the shaver body (gooseneck). Going down into the shaver body is the pusher handle, which presses the ice against the revolving cutter head, which shaves the ice. CAUTION Machine must be properly grounded to prevent shock in case of electrical problems. The motor is 110-volt single phase, 60 cycle AC current.

## TO OPERATE THE MACHINE

1. Start the motor and fill the gooseneck with ice cubes or block into pieces 3" to 4" in size pieces. Fill to about an inch or so from the top, the larger the pieces of ice the better the snow will be.
2. Push the pusher handle down to press the ice against the cutter head. A firm even pressure is all that is required, but sometimes you will find it better to relieve the pressure two or three times on the way down. This lets the ice rearrange itself and you will get a better hold on the handle.
3. DO NOT FORCE THE HANDLE, too much pressure will cause the motor to stall.
4. When too much pressure is necessary, relieve the handle, and then come down again. Too much pressure on the pusher handle will make the ice come out coarse: too little pressure makes the ice mushy.

In normal operations the motor gets warm – a surface temperature of 150 degrees is normal.

## CAUTION

DO NOT let any metal get down in the gooseneck, or you will ruin the blades.

NEVER put your fingers or any objects into the shaver body while the motor is running.

DISREGARDING these instructions and careless handling will result in accidents and/or injury. If Problems not covered occur, contact PREMIERE EVENTS IMMEDIATELY.

## CLEANING

Always unplug the machine before cleaning. Wipe all surfaces clean before returning to PREMIERE to AVOID ADDITIONAL CLEANING CHARGES.

PREMIERE EVENTS SOUTH (512) 292-3900  
PREMIERE EVENTS NORTH (512) 870-8552  
PREMIERE EVENTS DRIPPING SPRINGS (512) 829-4498